SERVICE PARTS LIST

Milwaukee REVISED BULLETIN DATE SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS July 2013 **CORDLESS 18V 7/16" HEX IMPACT WRENCH** WIRING INSTRUCTION STARTING SERIAL NO. 2665-20 CATALOG NO. **B82A** See Page 3

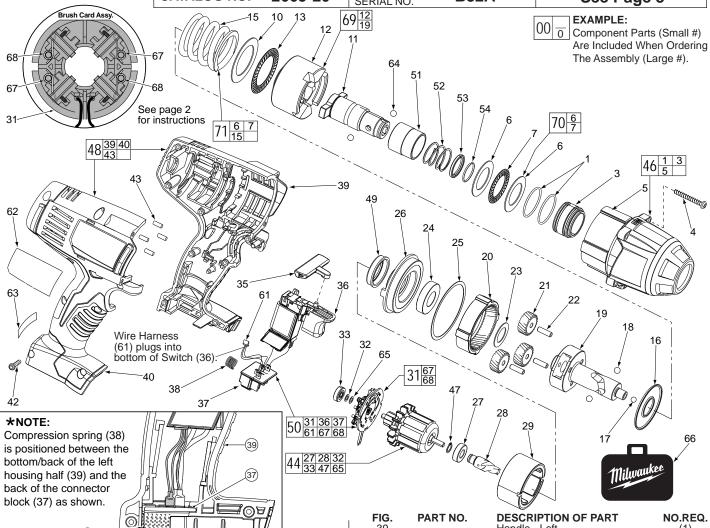


FIG.	PART NO.		O.REQ.
1		O-Ring	(2) (1)
3 4 5 6 7		Bushing	
4	05-88-5988	M5 X 35mm Pan Hd. Slt. T-20 Screw	(4)
5		Gearcase Housing	(1)
6		Washer	(2)
		Thrust Bearing	(1)
10	45-88-1006	Washer	(1)
11	42-06-0700	7/16" Hex Anvil	(1)
12		Hammer	(1)
13	02-80-0200	Thrust Bearing	(1)
15		Compression Spring	(1)
16	45-88-1650	Washer	(1)
17	02-02-7010	7/32" Ball	(1)
18	02-02-0250	1/4" Ball	(2) (1)
19		Camshaft	
20	32-65-0260	Ring Gear	(1)
21	32-62-0500	Planet Gear	(3) (3)
22	44-60-1960	Pin	(3)
23	45-88-1655	Washer	(1)
24	02-04-0375	Ball Bearing	(1)
25	34-40-0290	Seal Ring	(1)
26	44-66-0895	Motor Mount Plate	(1)
27		Ball Bearing - Front	(1)
28		Pinion	(1)
29	18-01-3025	Service Field Assembly	(1)
31	22-22-1700	Brush Card	(1)
32		Washer	(1)
33	45.04.0570	Ball Bearing - Rear	(1)
35	45-24-0570	Forward / Reverse Shuttle	(1)
36	23-66-0427	Switch	(1)
37	40.50.4000	Connector Block	(1)
38	40-50-1090	Compression Spring	(1)

FIG.	PART NO.	DESCRIPTION OF PART	NO.REQ.
39		Handle - Left	(1)
40		Handle - Right	(1)
42	06-82-0995	M4 x 16mm Pan Hd. T-20 Screw	(9)
43	45-30-0255	Rubber Slug	(4)
44	16-01-3030	Armature Assembly	(1)
46	14-30-0965	Front Housing Assembly	(1)
47		Retaining Ring	(1)
48	31-44-0695	Handle Set	(1)
49	45-22-0380	Rubber Cap	(1)
50	22-56-1450	Switch/Connector Block Assembly	(1)
51	42-76-0185	Collar	(1)
52	40-50-0365	Collar Spring	(1)
53	44-90-0020	Support Ring	(1)
54	34-60-0050	Retaining Ring	(1)
61		Wire Harness	(1)
62	12-20-2670	Service Nameplate Kit	(1)
63	10-20-2695	Warning Label	(1)
64	02-02-0250	1/4" Bali	(2) (1)
65		Washer	
66	42-55-2665	Carrying Case, Optional Brush Spring - Right Handed	(1)
67	40-50-2170	Brush Spring - Right Handed	(2) (2) (1)
68	40-50-2175	Brush Spring - Left Handed	(2)
69	14-46-2070	Camshaft/Hammer Service Kit	(1)
70	45-88-1877	Washer/Bearing Kit	(1)
71	14-46-0755	Spring/Washer/Bearing Kit	(1)
FIG.	LUBRICATION		
		e, No. 49-08-7655):	
20 21	Lightly coat the	LD of the Ring Gear (20) and the ce	nter of


the three Planet Gears (21) with grease.


Coat outside grooves of Bushing (3) with grease.

19 11 3

Place a dab of grease in ball grooves of the Cam Shaft (19). Lightly coat the front washer surface of Anvil (11) with grease, place a dab in the Ball hole on the backside of Anvil.

MILWAUKEE ELECTRIC TOOL CORPORATION 13135 W. LISBON RD., BROOKFIELD, WI 53005

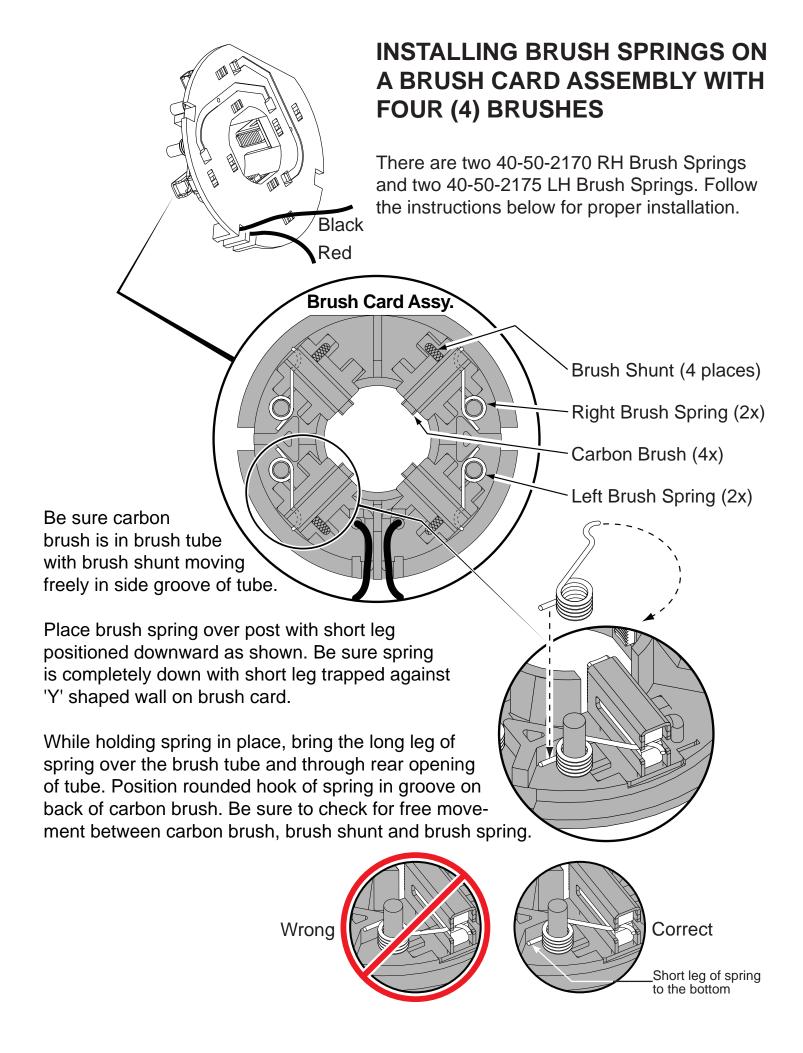

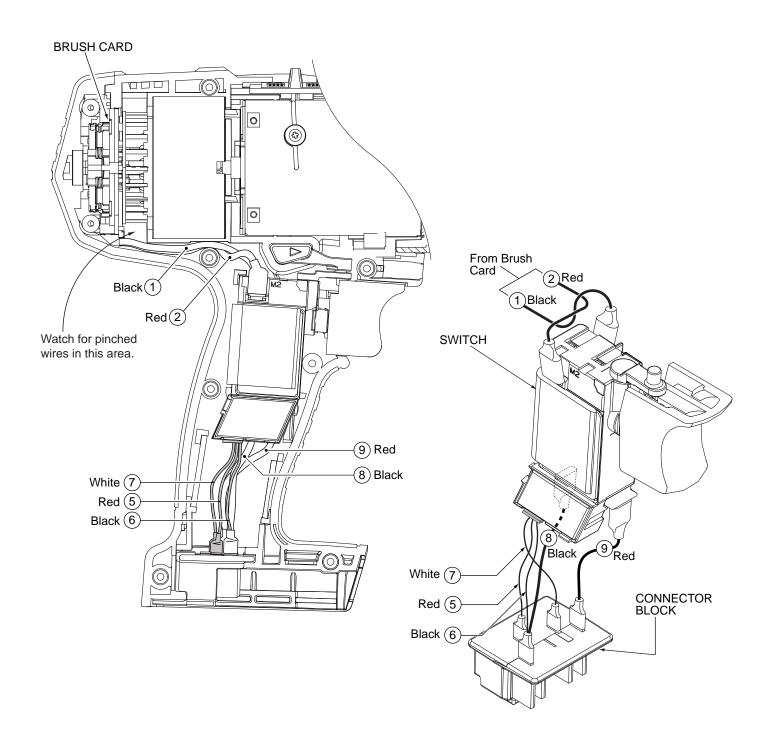

WIRING SPECIFICATIONS							
Wire No.	Wire Color	Origin or Gauge	Length	Terminals, Connectors and 1 or 2 End Wire Preparation			
1	Black			Component of the Switch/Connector Block Assembly.			
2	Red			Component of the Switch/Connector Block Assembly.			
5	Red			Component of the Switch/Connector Block Assembly.			
6	Black			Component of the Switch/Connector Block Assembly.			
7	White			Component of the Switch/Connector Block Assembly.			
8	Black			Component of the Switch/Connector Block Assembly.			
9	Red			Component of the Switch/Connector Block Assembly.			

